



Instruction Manual

Smart Slim Hood

(Touch Switch And Motion Sensor)

MODEL NO.:

TAL208BK/TAL208SS=1400m³/h

TCP006BK-1/TCP006SS-1=730m³/h

TAL615-903BK/TAL615-903SS=830m³/h

TAL616-602BK/TAL616-902BK=830m³/h

TAL616-602SS/TAL616-902SS=830m³/h

TAL65-802-60BK/TAL65-802-90BK=830m³/h

TAL65-802-60SS/TAL65-802-90SS=830m³/h

TAL902TBK-3/TAL902TSS-3=850m³/h

TAL500-60BK/TAL500-90BK=830m³/h

From the Manufacturer

Please read this user manual carefully before attempting to operate the appliance and store it in a safe place for future reference.

This appliance and its packaging are produced by processes that minimize waste and respect the environment.

Please help us to continue this effort to protect the environment by using the appliance efficiently and dispose of the packaging in a responsible manner

For the User

1. Your safety



PLEASE READ THIS SECTION THOROUGHLY BEFORE ATTEMPTING TO OPERATE THE APPLIANCE

1. There must be ample room for ventilation of the room when the range hood is used.
2. There is a fire risk if cleaning is not carried out in accordance with the instructions.
3. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the usage of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
5. Air exhausted must be in accordance with local laws
6. Product is only for residential use not for commercial . If for commercial use warranty will not be covered.

8. How to clean the oil cup and maintenance

To clean oil cup is very simple, just remove the oil cup, pour out the waste oil, wash the oil cup with hot water and detergent, absorb and dry the water, and then install it for online dry cleaning. Of course, there are professional cleaning hoods now. Professional cleaning hoods involves using hot water and alkali (oxygenation hammer) to soak them, and then brushing them clean with a brush.

Attention:

Please take off the oil cup before put down the oil panel.

7.Troubleshooting

Symptoms	Possible Cause	Action
No working	No electrical supply	Check that the main switch is turned on
		Check that the plug is connected
Poor airflow	Aluminum grease filters clogged	Clean the filters and replace when dry
	Charcoal grease filters clogged	Replace charcoal filters with new sets
Motor running but no airflow	Butterfly valve jammed	Contact technician
Motor cuts off after a few minutes	High temperature safety device activated	The kitchen is not sufficiently ventilated
	The hood is installed too near the cooking stove	The hood must be at least 65cm from stove
Strong cooking smell	Charcoal filters are not installed	Charcoal filters must be installed in re-circulating mode
Oil dripping onto stove	Oil cup missing or not installed	Remove aluminum filter and replace oil cup
	Aluminum grease filter saturated	Wash the aluminum grease filters
Whirring sound	Foreign object in contact with fan blade	Contact technician

Installation

This appliance must be installed or repaired by a qualified technician only. It is

dangerous to modify any part of this appliance.

The manufacturer declines all responsibility in case of failure to adopt proper safety measures. Ensure

the location in which this appliance is installed has good permanent ventilation.

In ducted mode, there must be one or more permanent air inlet. The air collected must not be discharged into a duct used to blow off smoke from other appliances fed with electricity

Check that the voltage in your area corresponds to the appliance as indicated on the rating label. Do not

connect the hood to a duct that carries combustion fumes (e.g. fireplace).

During use

This product is designed for household use only and should not be used for commercial applications. After use,

always ensure that all controls are in the "OFF" position.

When frying with a gas flame, take particular care not to allow the oil or grease in the pan to catch fire.

Cleaning, Maintenance & Service

Clean the grease filters often (at least once monthly). Heavy oil deposits are a fire hazard. Hood surface should be cleaned with soft cloth and non-corrosive detergent.

Important: Never attempt to repair this appliance by yourself. Always refer to qualified Service Technicians.

For your safety, insist on original parts.

Always switch off the electricity and unplug the connection before conducting maintenance or cleaning.

Electric Cord

Ensure the supply cord is not exposed to heat, chemicals or sharp objects.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

2.Description

 
Re-circulating mode

Depending on your requirement,this appliance can be configured to operate in the re-circulating modes

Fumes are filtered for grease and odour through the aluminum grease filters and the charcoal filters respectively and re-introduced into the kitchen environment.In re-circulating mode,both the aluminum grease filters and the charcoal filters should be installed.

3.Instructions for use

Touch Control

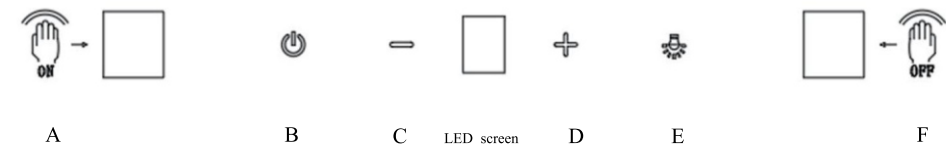

- A, Within 10-15cm of the distance switch,swipe once from left to right for opening(LED screen shows"1"),Swiping to the right,the fan runs at mid speed (LED screen shows "2"). Swiping to the right again,the fan runs at high speed (LED Screen shows "3")."repeat this cycle"
- B, Press it to turn on power. Press it again to turn off power.
- C, When the fan is working at high speed (LED screen shows "3"),Press C once,the fan runs at mid speed (LED screen shows"2").Press C again,the fan runs at low speed (LED screen shows"1")
- D, When the fan is working at low speed (LED screen shows"1"), Press D once, the fan runs at mid speed (LED screen shows"2").Press D again,the fan runs at high speed (LED Screen shows"3").
- E, Press it to turn on light. Press it again to turn off light.
- F, Within 10-15cm of the switch,swipe once from right to left to turn off the hood.

Installation

A way:

Remove the bottom and install from inside.

Behind got screw 4 holes.

FOR THE INSTALLER

6.Safety Information

Connection to the electrical supply

Electrical connection must be made only in accordance to the local standards and laws.

Ensure that the electrical supply complies with the setting on this appliance, otherwise, do not connect.

The electrical connection of this appliance must be earthed. If unsure, check with a qualified electrician.
Color code:

Green & Yellow=EARTH

Blue=NEUTRAL

Brown=L/VE

 
Ensure that the power supply chord is free from any heat

source or sharp objects.


Replacement of lamp must not exceed 40W

LED lamp must not exceed 1.5W

Way one:

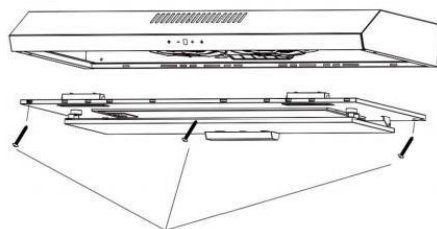


Take off the screws

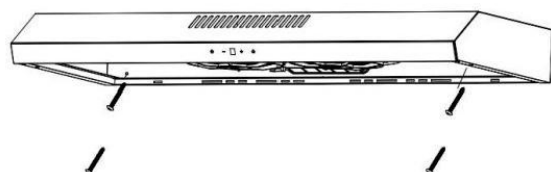 


Installed the slim hood with screw

 Support with a back support

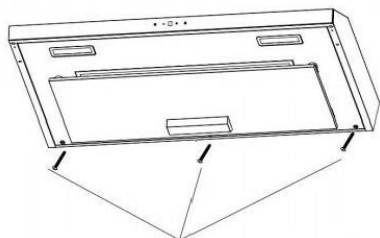



Fasten the screws again like this.

 Way two:




Installed the slim hood with screw.

  Support with a top support.

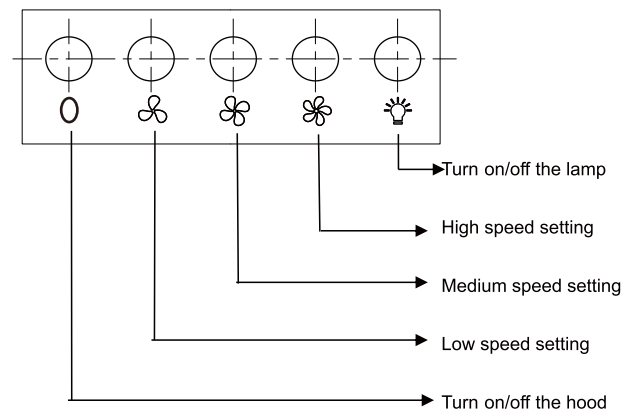


- A, Within 10-15cm of the distance switch, swipe once from left to right for opening (LED screen shows "1"), Swiping to the right, the fan runs at mid speed (LED screen shows "2"). Swiping to the right again, the fan runs at high speed (LED screen shows "3"). "repeat this cycle"
- B, ① When the touch is turned on for the first time, it enters standby mode, and pressing it again enters gear running.
 ② Press the B key when the gear is running, and only close the gear running; Then press the gear again to return to the gear before it was closed.
 ③ Press and hold the B key while in standby mode to turn off all functions and enter off state.
- C, When the fan is working at low speed (LED screen shows "1"), Press C once, the fan runs at mid speed (LED screen shows "2"). Press C again, the fan runs at high speed (LED screen shows "3").
- D, Press it to turn on light. Press it again to turn off light.
- E, When the gear is open, press the E key to turn on the 5-minute delay function, and turn off the machine after the countdown is over. Delayed process switching gear The standby function with time delay is canceled. When in standby mode, press and hold the E key for about 5 seconds to enter the hour setting. At this time, "B" "C" "D" flashes, set "hour" first, Press the "C" and "D" keys to increase or decrease the time. After setting, touch the "B" key again to jump to the "minute" setting. Press the "C" and "D" keys to increase and decrease the time. After the setting is completed, touch the "B" key again to exit the setting.
- F, Within 10-15cm of the switch, swipe once from right to left to turn off the hood.

 
4.Dimensions Chart

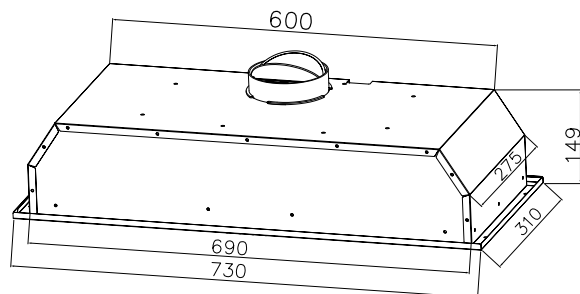

TCP006BK-1
TCP006SS-1

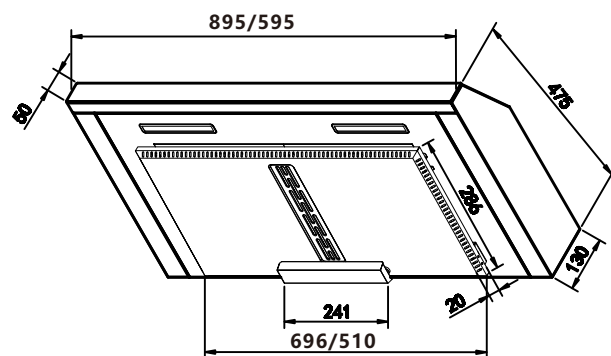 


TAL65-802-60BK
TAL65-802-90BK
TAL65-802-60SS
TAL65-802-90SS

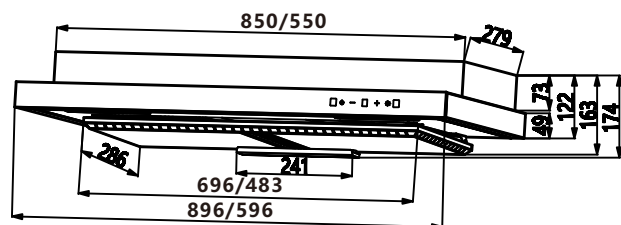 


TAL616-602BK
TAL616-902BK
TAL616-602SS
TAL616-902SS

Ducted mode installation:

 
Step 1. Remove the aluminum filters or charcoal filters firstly
Step 2. Then place the air door to Position  carefully, see below photo.

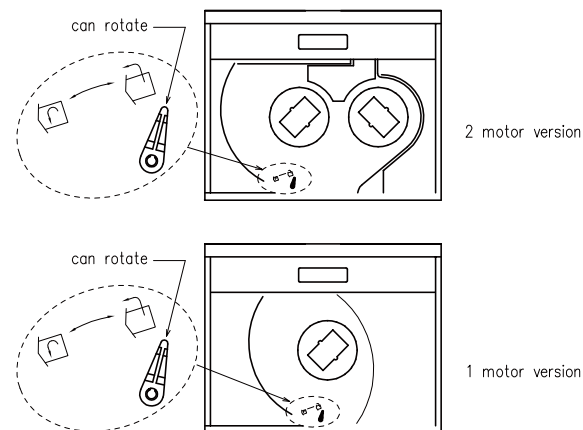


 Step 3. Place the outlet on the round hole of top panel.
Step 4. Fix the outlet with screw.

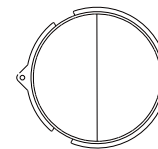


  Step 5. Use a tie to fix the duct on the outlet well.

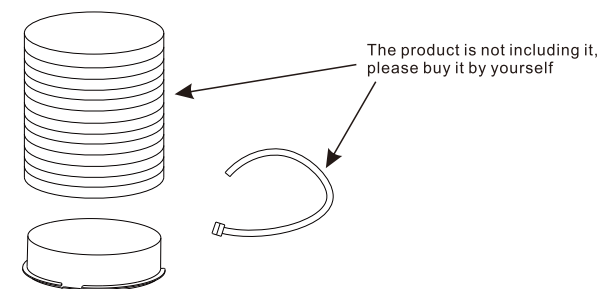


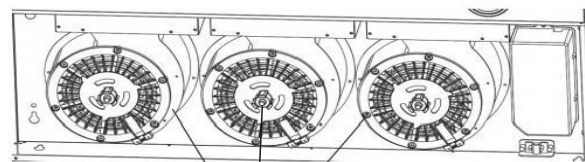

CHARCOAL FILTER

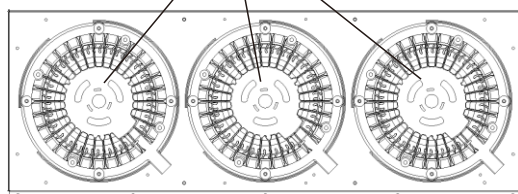 


 Note: The charcoal filter cannot be washed or recycled. It should be changed after a period of use depending on the frequency of use of the cooker hood. Or when you notice that the charcoal is full of oil, affecting the suction/air flow, then it should be changed.

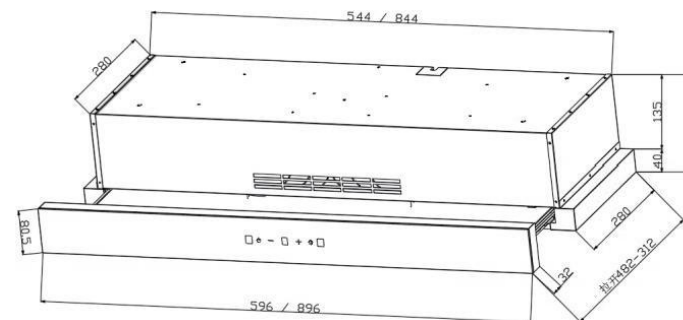


TAL500-60BK

 TAL500-90BK

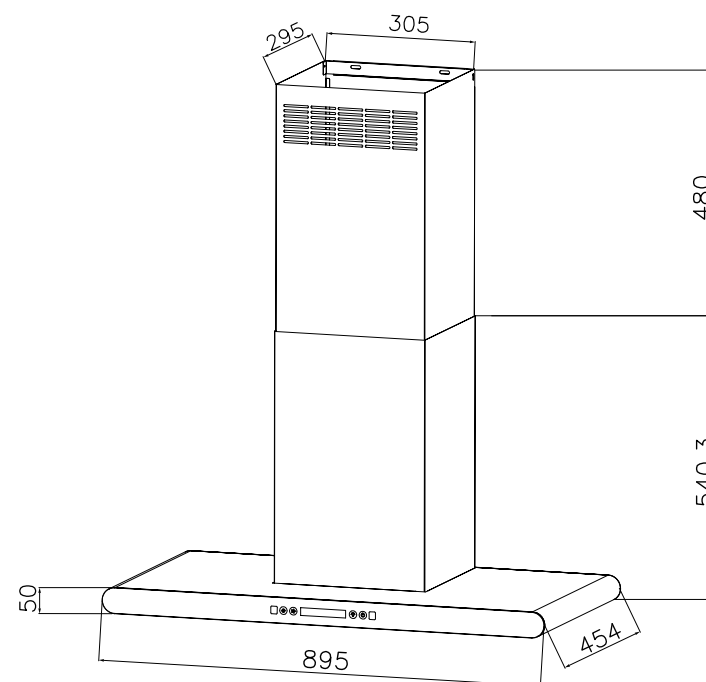


TAL208BK

 TAL208SS

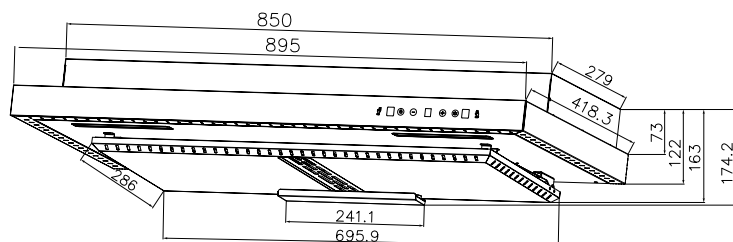


TAL615-903BK
TAL615-903SS

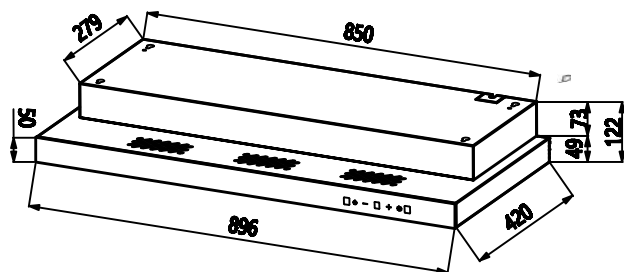 


TAL902TSS-3
TAL902TBK-3

 Recycling: The recycling mode with charcoal filter. The charcoal filters are mounting on the bottom of motor casing

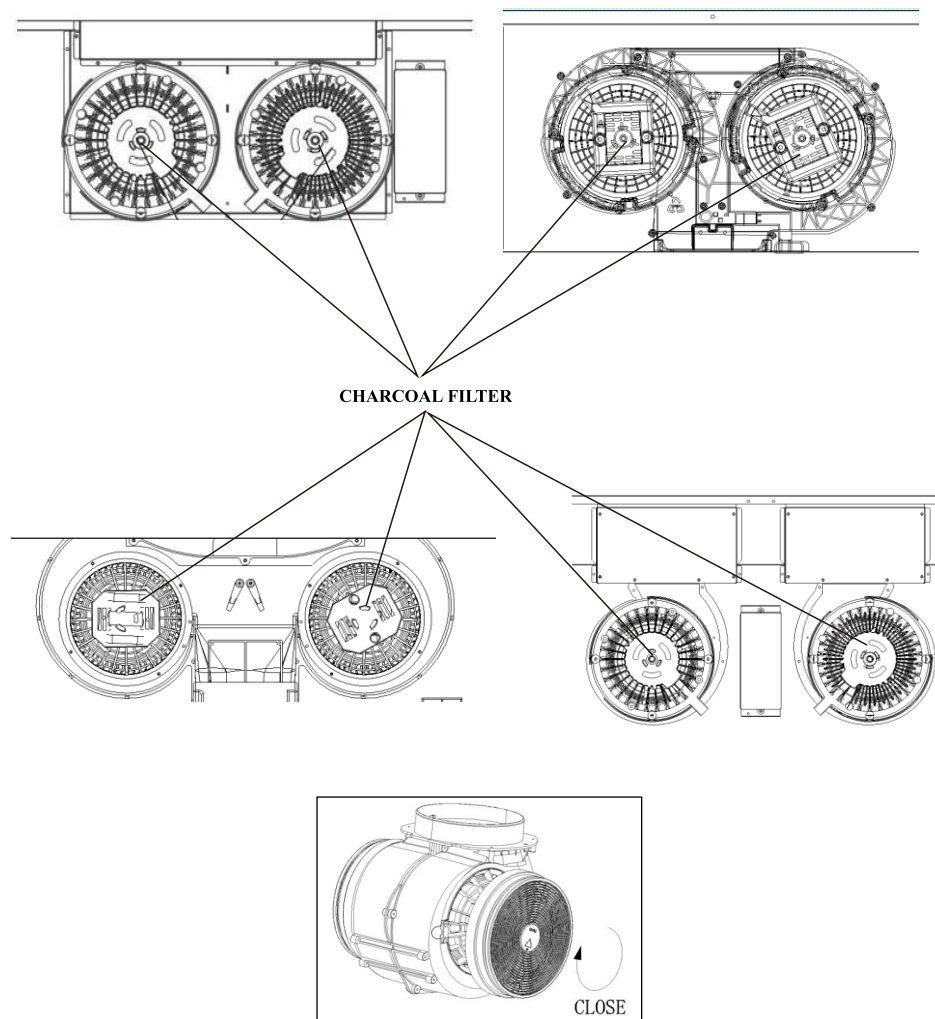

 5. To install onto the wall drill 2 holes of Ø8mm on a suitable place according with the centre distance of hole in the back of the cooker hood.
 Insert the nut into the holes.
 Insert the screws into the nuts and tight.
 Put the cooker hood onto the tighten screws.
 Fix the cooker hood with safety screw.
 The two safety vents are positioned on the back casing, with diameter of 6mm.
 Put the one way valve onto the cooker hood.

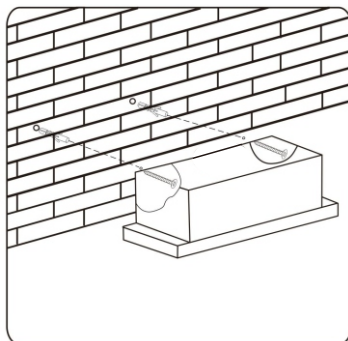

Cleaning & Maintenance



ALWAYS SWITCH OFF AND UNPLUG FIRST!

SURFACES:

Wash with warm soapy water and a soft sponge. Never use abrasive detergent, scouring pads, steel wool or solvents on any part of this appliance as this will cause irreparable damage.

ALUMINUM GREASE FILTERS:

Wash in the dishwashers or soak the panels in a degreasing agent for an hour, then rinse off and dry before re-installing.

CHARCOAL FILTERS:

(Only in re-circulating model): Charcoal cannot be reused. They must be replaced with the appropriate types once half year or depending on the frequency of appliance usage.

For this appliance to function effectively, regular maintenance is a must.

Clogged filters restrict airflow and may cause the motor to overheat.

5. Installation

Use suitable bolts to mount the appliance on a secure surface.

The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. When the range hood is located above a gas appliance, this distance shall be at least 65 cm. If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account;

The location of the installation must have permanent openings for ventilation.

 
Regulations concerning the discharge of air have to be fulfilled.

It is strongly recommended that the hood be installed right over the exhaust air from cooking.


It is better not to install the outlet of the pipe in the wind direction, which can prevent the exhaust air from flowing backwards.

Fasten the components for the exhaust outlet with screws. To ensure good ejection of exhaust air, the pipe must not be bent for too many times.

1. Fix the product body into the cabinet with 10 pcs screws.
2. connect the lamp and switch wire and fix the panel on the body and tighten 2 pcs screws per left and right side, finally install the filter.



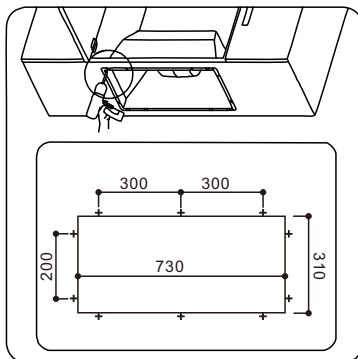


 4. Mark down the position and drill 2 holes for each chimney bracket and tighten the bracket with screws. Screw and tighten the hook on to the wall with the screws & plastic wall anchors provided. Lift the cooker hood and hang on to the wall hook. Put the upper chimney into lower chimney. Then pulling out the upper chimney upwards. Adjust to reach the height required. After drilling the 2 holes and fixing the bracket, install the chimney cover by locking with 2 screws in both side holes.

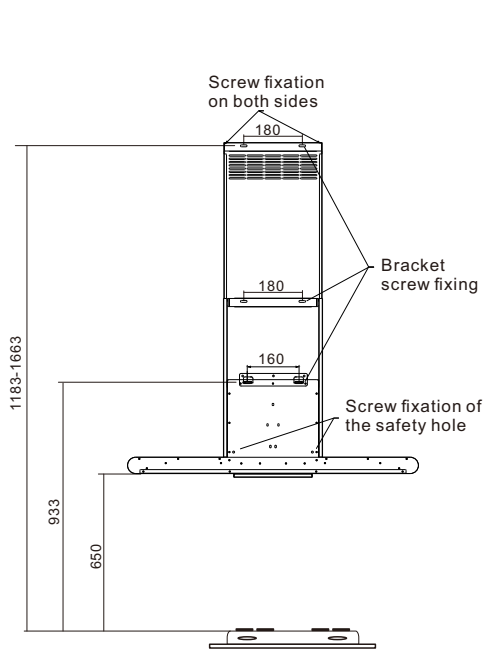



Recommended installation height: 700mm.

   Required minimum installation height: 650mm.

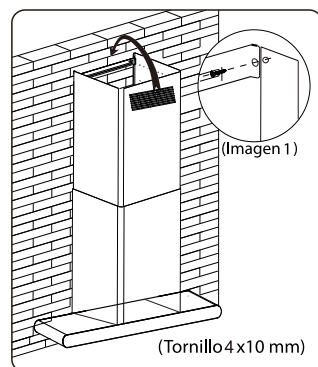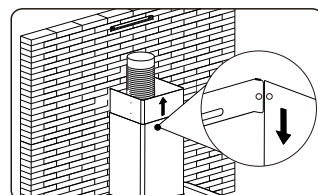
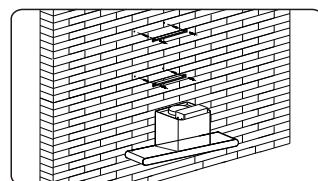


For installation:

  1. According to the center distance of hole in the back of the slim hood, measure the position and then drill 2 pcs $\varnothing 8$ mm holes on the wall. Insert the plastic wall anchors into each hole and tighten 2 pcs ST4 $\times$ 35 screws into the plastic wall anchors. Place the slim hood onto the tighten screws. Fix the cooker hood with safety screw. The two safety screw vents are positioned on the back casing, with diameter of 6mm. Put the one-way-valve onto the hood to finish installation.

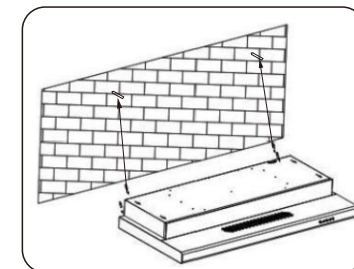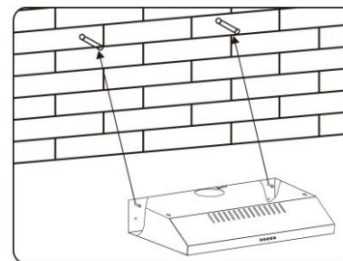

  2. Measure the position and drill 4 holes of 6mm diameter into the bottom of cabinet and cut the vent hole in cabinet. Align the slim hood to the hole in the bottom of cabinet and screw in with 4 pcs ST4 $\times$ 35 screws as the picture.

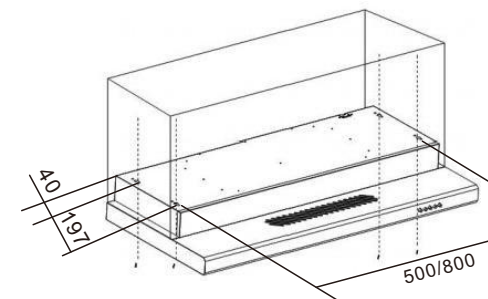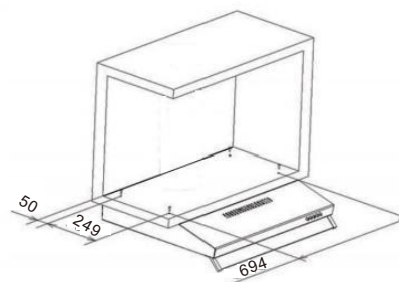

3. Remove the filter and loosen 2 pcs screws per left/right panel side, disconnect the lamp and switch connector and then put the panel away. (As picture)

